SAMSUNG

WASHING MACHINE

Owner's Instructions

WT8202 / WT8203 / WT8204 / WT8205 / WT8502 / WT8503 / WT9200 / WT9300 / WT9304AG

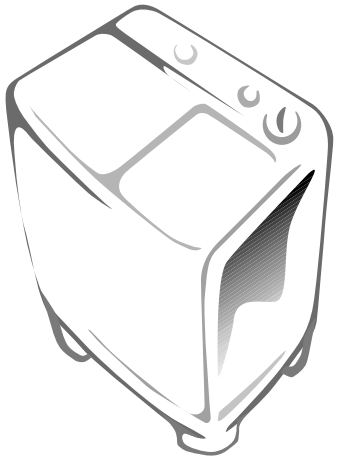

PRECAUTIONS	2
CONTROL PANEL	2
DESCRIPTION AND CLEANING OF PARTS	3
INSTALLATION	3
Location	3
Connecting the drain hose	3
WASHING PROCEDURE	4
To Wash	4
To Spin dry	4
To Rinse	4
Overflow rinse	5
Additional rinse	5
LAUNDRY GUIDE	5
MAINTENANCE	5
TROUBLE SHOOTING	5
SPECIFICATIONS	

Before operating the washing machine, please read this manual thoroughly, and retain it for future reference.

The Owner's instructions is for normal use.
Making use of the Owner's Instructions is dependent on your washing machine model.

PRECAUTIONS

- Don't use adapter or extension cord to supply power to your washing machine.
- Don't allow electrical parts to come into contact with water. (This may risk electric shock.)
- Don't attempt to repair or reconstruct your washing machine unit in case of trouble. (Ask the nearest Samsung authorized service center to undertake repairs.)
- Don't expose your washing machine to high heat (direct sun light) and high humidity. (Heat can damage the external surfaces.)
- Don't open inner lid until spin tub has come to a complete stop. Even if spin tub rotation slows down it can still causes injuries.
- When spinning, always ensure that the safety cover is pressed tightly against the clothes, maintaining horizontal level.
- Don't put clothes with gasoline, benzene, thinner, alcohol or other inflammable substances into the wash tub and the spin tub.
- Don't put hot objects, lighted candles or any flaming objects on or near the washing machine as these are fire hazards.
- Don't let sprays (insecticide, perfume etc.) come in contact with the switch controls. (It might cause timers to warp or damage plastic parts.)
- Don't use vinyl chloride covers.
- Don't use detergent in excess of amount indicated in the package. (This will result in insufficient washing.)
- While the washing machine is in operation, don't insert hand, foot, or anything under the base.
- Don't step on the washing machine or put heavy things on it.
- Don't allow children to peep into the wash tub or spin tub, as it could result in their falling in and getting injured.
- Don't allow cord to be pinched by the unit or by other heavy objects.
- When power cord and plug are damaged, contact the nearest authorized service center to undertake repairs.
- Unplug the washing machine when not in use. Pull out the plug and not done by pulling the cord. Always make sure that your hands are dry.
- Don't use the washing machine if the power cord is damaged or if the wall mount socket is loose.
- Don't severely twist, bundle, bend or do anything else that can damage the power cord.

CONTROL PANEL

1. WASH SELECTOR

WT8202/8203/8204/8205/8502/8503

This is used to select wash action.

2. WASH TIMER

WT8202/8204/8502

This is used to set the wash time, 1-15 minutes.

WASH TIMER

WT8203/8205/8503/9200/9300/9304AG

This is used to set wash time,1-35 minutes (With Soaking action)

WASH TIMER

3. CYCLE SELECTOR

WT8202/8203/8204/8205/8502/8503

This is used to set the Washing or Draining.

CYCLE SELECTOR

WT9200/9300/9304AG

This is used to set the Washing or Draining, and to select wash action.

CYCLE SELECTOR

4. SPIN DRY TIMER

WT8202/8203/8204/8205/8502

This is used to set the spin time, 1-5 minutes.

SPIN DRY TIMER

WT8503/9200/9300/9304AG

This is used to set the spin time, 1-10 minutes.

SPIN DRY TIMER

5. WATER SELECTOR

WT8202/8203/8204/8205/8502/8503/9200/9300/9304AG

During washing, WATER SELECTOR KNOB should be selected to Wash.

WATER SELECTOR

During spin rinsing, WATER SELECTOR KNOB should be selected to Spin.

WATER SELECTOR

Don't keep WATER SELECTOR KNOB in middle. This may damage the electrical parts

WATER SELECTOR

DESCRIPTION AND CLEANING OF PARTS

CLEANING THE LINT FILTER

- If the dregs are piled up in the lint filter after finishing the wash, push down and pull it out as shown in the figure.
- Wash the filter net in water.

OVERFLOW FILTER

- Pull the upper side of the overflow filter with two fingers inserted into hole 'A' in the direction of arrow as shown in the figure.

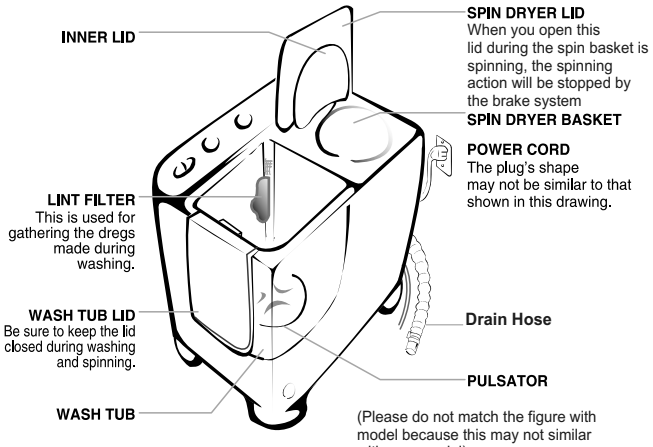
INNER LID
SPIN DRYER LID
When you open this lid during the spin basket is spinning, the spinning action will be stopped by the brake system
SPIN DRYER BASKET
POWER CORD
The plug's shape may not be similar to that shown in this drawing.
LINT FILTER
This is used for gathering the dregs made during washing.
WASH TUB LID
Be sure to keep the lid closed during washing and spinning.
Drain Hose
PULSATOR
WASH TUB

(Please do not match the figure with model because this may not similar with your model)

INSTALLATION

LOCATION

Leave some space

Space at least 15cm between the washing machine and the wall.

Place the washing machine on a sturdy flat surface.

If the washing machine is placed on an uneven or weak surface, noise or vibration may occur.

Never install the washing machine near water.

Do not place the washing machine in steamy room or where the washing machine is directly exposed to rain. Moisture may damage electrical insulation and cause an electrical shock to occur.

Avoid direct sunlight or heating devices.

As plastic and electrical components are affected by direct heat, never place the washing machine near heaters, boilers, etc. or under direct sunlight.

PRECAUTIONS WHEN INSTALLING.

1. Place the washing machine on a sturdy surface. (Max. Inclination allowable is 2˚)
2. Never support the washing machine with a brick or a piece of wood for leveling. During spinning this may start to vibrate excessively and even fall down.

CONNECTING THE WATER DRAIN HOSE

1. Fit the water drain to the drain outlet. (As shown in figure)



2. Push it with force further to the bottom of the drain outlet.
3. Check the drain hose for not getting apart from the outlet by drawing it.

CLEANING THE WASH TUB

First, fill water into the wash tub up to "L" level(a level that wash tub is almost filled with water about 4/5) then drain water from the wash tub simultaneously with operating wash cycle for 1~2 minutes.

- *Close the wash tub lid.*

CLEANING THE WASHING MACHINE

Wipe off stains on the cabinet and operation panel with a soft cloth.
either use benzene, thinner, cleanser, or wax, nor scrub the washing machine with a brush. Painted surfaces or plastic parts will be damaged.

WASHING PROCEDURE

TO WASH

1. Before starting to wash, proceed as follows.
   Connect the water supply hose and open the water tap.
   - Connect the hose water to water selector
   - Lay the drain hose down toward a sinkhole.
   - Connect the power cord to the power supply outlet.
2. WT8202/8203/8204/8205/8502/8503
   - Set the WASH SELETOR KNOB to the desired mode.
   - Set the CYCLE SELECTOR KNOB to "Wash/Rinse"
3. WT9200/9300/9304AG
   - Set the CYCLE SELECTOR KNOB to the desired mode.("Normal" or "Wash/Heavy")
4. WT8202/8203/8204/8205/8502/8503/9200/9300/9304AG
   Set the WATER SELECTOR KNOB to WASH.

5. Load laundry into the WASH TUB.

6. Fill water in the WASH TUB and add the detergent.

7. WT8202/8204/8502
   - Set the WASH TIMER 1~15 minutes.

8. WT8203/8205/8503/9200/9300/9304AG
   - Set the WASH TIMER 1~35 minutes.
   (Set the WASH TIMER to a point between "15" to "35" for SOAK fuction)

- Although the machine may stay still, maximum 5 minutes. If the WASH TIMER indicates in excess of 15 minutes, it is just in the process of soaking and not a breakdown.

SOAK FUNCTION WT8203/8205/8503/9200/9300/9304AG

- If the WASH TIMER is set to a point between "15" to "35", the washing machine start the wash (15min), after the soak (2~20) is completed
- The Soak function (20 min.) repeats the cycle that is 1.5~2.0 min. Turning and the 5 min. Resting (3 times)

9. After washing, set the CYCLE SELECTOR KNOB to 'DRAIN' for drain.

TO SPIN DRY

1. Transfer the clothes into the spin basket and arrange the clothes evenly.

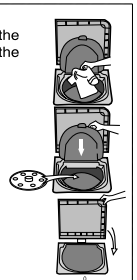

2. Be sure to replace the safety cover and close the inner lid.
3. Close the spin dryer lid.
4. WT8202/8203/8204/8205/8502
   Set the SPIN DRY TIMER 1-5minutes.
   WT8503/WT9200/WT9300/9304AG
   Set the SPIN DRY TIMER 1- 10 minutes.



TO RINSE

1. Set the CYCLE SELECTOR KNOB to "Wash/Rinse" or "Wash/Heavy"



2. Supply the proper amount of water as per laundry requirement.
3. Set the WASH TIMER to 2~3 minutes.



4. Drain the water.
   Set the CYCLE SELECTOR KNOB to 'DRAIN'.

5. Repeat this cycle until drain water is clean. (2~3 cycles)

OVERFLOW RINSE

1. Keep supplying water (adjust water pressure to ensure that the amount of water supplied does not exceed the amount of water drained.)



2. Set the WASH TIMER 6~8 minutes.

3. As soon as the WASH TIMER shuts off, turn off the water tap.

4. Set the CYCLE SELECTOR KNOB to 'DRAIN'.

ADDITIONAL RINSE

1 After rinsing you can select this course for more effective rinse (Don't just select this course for rinse.) Load the laundry evenly into the spin basket.

2 Set the WATER SELECTOR KNOB to SPIN and CYCLE SELECTOR KNOB to 'DRAIN'.

3 Supply water for about 1 minute. Adjust the water flow to prevent overflow from the wash tub.

4 After completing the water supply, cover the laundry with safety cover and close the inner lid.



5 Close the spin dryer lid.

6 WT8202/8204/8502
Set the SPIN DRY TIMER 2~3 minutes
WT8503/9200/9300/9304AG
Set the SPIN DRY TIMER 3~5 minutes.



LAUNDRY GUIDE

WASHING TIME

TYPE OF CLOTHING	WASHING TIME (minutes)	WASHING SELECTION
Extremely soiled heavy fabric	10 ~15	HEAVY
Linen cotton, etc.	8 ~15	
Ordinary clothes (underwear,etc)	7	NORMAL
Slightly soiled synthetic fiber	2 ~ 5	
100% wool, mixed wool knitting, thin synthetic fiber with tags indicating hand washing	2 ~ 5	

SPIN DRY TIME

TIME	TYPE OF FABRIC
1 min.	Thin (synthetic fiber)
1~2 min.	wool
3~5 min.	cotton
5 min.	thick (cotton)

DETERGENT

WT8202/WT8203/ WT8204/WT8205		WT8502/WT8503		WT9200/WT9300/ WT9304AG	
AMOUNT OF DETERGENT	WATER LEVEL	AMOUNT OF DETERGENT	WATER LEVEL	AMOUNT OF DETERGENT	WATER LEVEL
34g	Low (34*l*)	37g	Low (37*l*)	45g	Low (45*l*)
42g	Medium (42*l*)	45g	Medium (45*l*)	55g	Medium (55*l*)
50g	High (50*l*)	55g	High (55*l*)	65g	High (65*l*)

The amount of detergent is average. Follow the instruction printed on the package for amount of detergent.
Choose the amount of detergent according to the fabric type.

MAINTENANCE

TO LOAD THE LAUNDRY INTO THE SPIN BASKET.

Press the laundry evenly and put the safety cover into the spin basket as shown in the figure.

TO RETRIEVE THE CLOTHING THAT HAS FALLEN BETWEEN THE BASKET AND TUB.

For safety reason, pull the power supply plug out of the socket.

1. Unscrew from the spin dryer hatch.
2. The spin dryer hatch is fixed to the brim by the concave and convex parts at two places. Expand the concave and convex parts, and pull up the spin dryer hatch to remove it.



3. Retrieve the clothing.
4. Close the spin dryer hatch. Push the hatch firmly until the catch at the front is securely attached and tighten the screw.

TROUBLE SHOOTING

TROUBLE	CHECK POINT
The washing machine does not work.	Check that the power cord is properly connected to a power outlet. Is there a power failure?
Clothes do not move freely.	Is the machine overloaded?
Incomplete spinning	Is the laundry arranged evenly?
Incomplete draining	Is the filter clogged with lint? See cleaning of parts.
The spin dryer basket will not run.	Is the spin dryer lid closed completely? Are laundry items (socks, etc.) falling out of the spin dryer basket and clinging to the axle? • See "To retrieve..."on page 4.

IF YOU NEED HELP.
Do not hesitate to call your local Samsung Service Center.
They will be pleased to help you. Be sure to give them your name, address, telephone number and the purpose of the call.

SAMSUNG ELECTRONICS

SPECIFICATIONS

	WT8202/WT8203	WT8204/WT8205	WT8502/WT8503	WT9200/WT9300/WT9304AG
DIMENSIONS (WxDxH)	776x434x900mm	776x434x930mm	799x489x932mm	820x504x980mm
WATER PRESSURE	0.05~0.3MPa	0.05~0.3MPa	0.05~0.3MPa	0.05~0.3MPa
	(0.5~3.0kg.f/cm2)	(0.5~3.0kg.f/cm2)	(0.5~3.0kg.f/cm2)	(0.5~3.0kg.f/cm2)
WEIGHT	24.5 kg	25.5 kg	26 kg	29.5 kg
STANDARD QUANTITY	50/	50/	55/	65/
OF WATER				
RATING TIME	Washing 1 Hour/	Washing 1 Hour/	Washing 1 Hour/	Washing 1 Hour/
	Spinning 15 minutes	Spinning 15 minutes	Spinning 15 minutes	Spinning 15 minutes

Samsung strives to improve its products at all times.
Both the design specifications and these user instructions are thus subject to change without notice.

Code No. DC68-01783C (Rev-2)

SAMSUNG

वॉशिंग-मशीन

उपभोक्ता निर्देशिका

WT8202 / WT8203 / WT8204 / WT8205 / WT8502 / WT8503 / WT9200 / WT9300 / WT9304AG

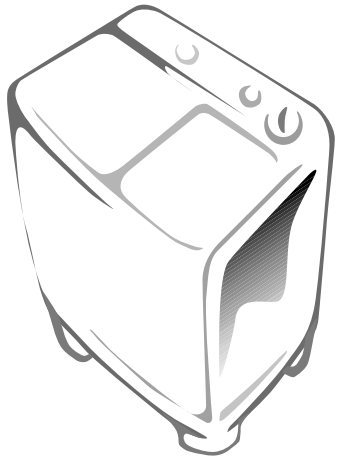

सावधानियाँ 2
कंट्रोल पैनल 2
विभिन्न भागों का विवरण तथा सफाई 3
संस्थापना 3
पर्यावरण 3
निकास नली को जोड़ना 3
कपडे धोने की विधि 4
धोना 4
सुखाना 4
खंगालना 4
ओवर फ्लो रिन्स 5
अतिरिक्त खंगालना 5
धुलाई निर्देशिका 5
रखरखाव 5
समस्या तथा उपाय 5
विशेषतायें

वॉशिंग मशीन का इस्तेमाल करने से पहले उपभोक्ता निर्देशिका को ध्यान से पढ़ें और भविष्य के लिए सम्भाल कर रखें।

उपभोक्ता निर्देशिका सामान्य उपयोग के लिए है।
उपभोक्ता निर्देशिका का उपयोग अपनी वॉशिंग मशीन के मॉडल के आधार पर करें।

सावधानियाँ

- अडैप्टर या एक्सटेनशन कोर्ड का इस्तेमाल मशीन चलाने के लिए ना करें।
- मशीन के विद्युत भागों को पानी के संपर्क में न आने दें। (आपको विद्युत का झटका लग सकता है)
- कुछ भी खराबी होने पर स्वंय मशीन को ठीक करने का प्रयास ना करें। (कम्पनी के अधिकृत सर्विस केन्द्र से सम्पर्क करें)
- मशीन को धूप और ज्यादा नमी में ना रखें (इससे मशीन की बाहरी सतह के खराब होने का खतरा है)
- जब तक स्पिन टब पूरी तरह से रूक नहीं जाए तब तक उसके अन्दर का लिड ना खोलें। यदि वह धीरे–धीरे घूम रहा है तब भी उससे हानि हो सकती है।
- स्पिन के समय स्पिन कैप का हमेशा प्रयोग करें और स्पिन कैप से कपड़ों को दबाते हुए समतल स्तर पर रखें।
- कपड़ो की धुलाई के लिए किसी अन्य रसायनिक पदार्थ जैसे थिनर, अल्कोहल, पैट्रोल का प्रयोग वॉश टब या स्पिन टब में ना करें।
- गर्म पदार्थ, जलती हुई मोमबती या ज्वलनशील वस्तु मशीन के पास ना रखें (इनसे आग लगने का खतरा है)
- कंट्रोल स्विच को इनसैक्टीसाईड या पर्फ्यूम के सम्पर्क से दूर रखें (इससे स्विच के जाम और प्लास्टिक के खराब होने का खतरा है)
- विनाइल क्लोराईड से बने कवर का प्रयोग न करें।
- डिटर्जेन्ट का प्रयोग पैकट मे दिए निर्देश से ज्यादा ना करें। (अन्यथा धुलाई अच्छी नहीं होगी)
- वॉशिंग मशीन प्रयोग करते समय अपना हाथ, पैर या अन्य कोई वस्तु ना डालें।
- मशीन पर कोई भारी वस्तु ना रखें और इस पर खड़े ना हों।
- बच्चों को वॉश टब या स्पिन टब में झाँकने ना दें उनके गिरने और चोट लगने का खतरा हो सकता है।
- विद्युत तार को मशीन या किसी भारी वस्तु से ना दबने दें।
- विद्युत तार या प्लग के खराब होने पर पास के कम्पनी अधिकृत सर्विस केन्द्र से रिपेयर कराऐं।
- जब मशीन इस्तेमाल नहीं कर रहें हो तो उसका प्लग निकाल कर रख दें। प्लग को पकड़ कर ही बोर्ड से निकालें न की तार को पकड़ कर। हमेशा सूखे हाथ से ही यह काम करें।
- विद्युत तार के खराब या कनैक्शन लूज़ होने पर मशीन का प्रयोग न करें। विद्युत तार को तोड़ मरोड़ कर ना रखें।
- मशीन प्रयोग करते समय ड्रेन होस को जमीन पर रखें।

कंट्रोल पैनल

1 वॉश सलेक्टर

WT8202/8203/8204/8205/8502/8503

•यह धुलाई क्रिया चयन के लिये उपयोग होता है।

2. वॉश टाईमर

WT8202/8204/8502

• यह धुलाई के समय को सेट करने के लिये है (1-15 मिनट)।

WT8203/8205/8503/9200/9300/9304AG

• यह धुलाई के समय को सेट करने के लिये है (1-35 मिनट)। (भिगोने की प्रक्रिया के साथ)

3.साईकल सलेक्टर

WT8202/8203/8204/8205/8502/8503

• यह धुलाई, खंगालने और पानी के निकास के लिये इस्तेमाल करते हैं।

WT9200/9300/9304AG

यह धुलाई, खंगालने, पानी के निकास और धोने की प्रक्रिया के चयन के लिये है।

4.स्पिन ड्राई टाईमर

WT8202/8203/8204/8205/8502

यह स्पिन समय को 1 से 5 मिनट तक सेट करने के लिये है।

WT8503/9200/9300/9304AG

यह स्पिन समय को 1 से 10 मिनट तक सेट करने के लिये है।

5. वॉटर सलेक्टर

WT8202/8203/8204/8205/8502/8503/9200/9300/9304AG

धुलाई, के समय **वॉटर सलेक्टर नॉब** वॉश की तरफ होनी चाहिये।

स्पिन के समय **वॉटर सलेक्टर नॉब** स्पिन की तरफ होनी चाहिये।

वॉटर सलेक्टर नॉब को बीच में न रखें। इससे बिजली के उपकरण खराब हो सकते हैं।

विभिन्न भागों का विवरण तथा सफाई

लिंट फिल्टर' की सफाई

- यदि धुलाई के बाद लिंट फिल्टर में गंदगी जमा हो गई हो तो उसे चित्र में दिखाये गए तरीके से नीचे दबाकर व बाहर की तरफ खींच कर निकालें और साफ करें।
- फिल्टर नेट को पानी से साफ करें।



ओवरफ्लो फिल्टर'

- ओवरफ्लो फिल्टर के ऊपरी हिस्से को दो उंगलियों की सहायता से 'A' छेद में डाल कर (चित्र के अनुसार) खींचे।



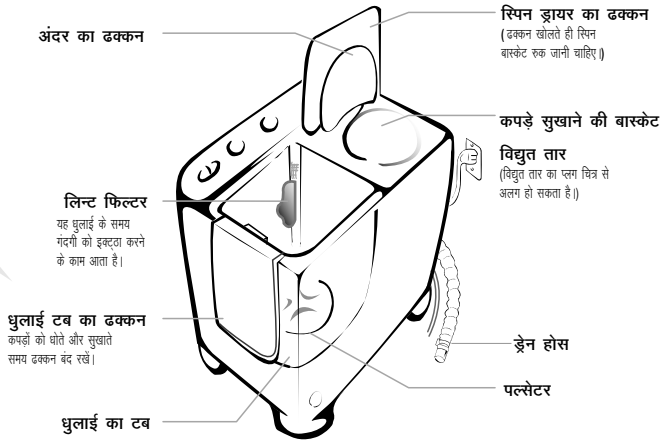
अंदर का ढक्कन
स्पिन ड्रायर का ढक्कन
(ढक्कन खोलते ही स्पिन बास्केट रुक जानी चाहिए।)
कपड़े सुखाने की बास्केट
विद्युत तार
(विद्युत तार का प्लग चित्र से अलग हो सकता है।)
लिन्ट फिल्टर
यह धुलाई के समय गंदगी को इक्ट्ठा करने के काम आता है।
धुलाई टब का ढक्कन
कपड़ों को धोते और सुखाते समय ढक्कन बंद रखें।
ड्रेन होस
पल्सेटर
धुलाई का टब

संस्थापन

पर्यावरण

•मशीन तथा दीवार के बीच में कम से कम 15 से० मी० की जगह छोडें।

•मशीन को समतल व हवादार जगह पर रखें। मशीन को टेढे फर्श पर न रखें (2°कोण तक की असमानता मान्य है)

•मशीन को वाष्प कमरे या सीधे बारिश से संपर्क वाले स्थान पर न रखें। आर्द्रता से बिजली के उपकरणों अथवा बिजली का झटका लगने का डर हो सकता है।

•सूर्य की सीधी रोशनी या गर्म उपकरणों से मशीन को दूर रखें। (बाहरी सतह तथा विद्युत उपकरणों के खराब होने का खतरा है)

संस्थापन के समय सावधानियाँ

•मशीन को समतल जगह पर रखें।
•मशीन को ईंट तथा लकड़ी के गुटके के सहारे न खड़ी करें, स्पिनिंग करते समय मशीन के ज्यादा हिलने या गिरने की संभावना है।

निकास नली को जोड़ना

•निकास नली को निकास की दिशा में घुसायें। (चित्र के अनुसार)



•निकास नली को तब तक दबायें जब तक यह निकास के तल तक न पहुँच जाए।
•निकास नली को खींच कर देखें, यह बाहर नहीं निकलनी चाहिए। (सामान्य ताकत से खींचें।)

वॉश टब की धुलाई

वॉश टब को पहले 'L' लेवल तक पानी भरें। (इस लेवल पर वॉश टब लगभग 4/5 भर जायेगा) तब पानी बाहर निकालें, साथ में वॉश साईकिल 1~2 मिनट के लिए चलायें।

धुलाई टब के ढक्कन को बंद रखें।

वॉशिंग मशीन की सफाई

केबिनेट तथा कंट्रोल पैनल को मुलायम कपड़े से साफ करें। किसी भी प्रकार का थिनर, बेंजिन, क्लीनसर या वैक्स न प्रयोग करें। वॉशिंग मशीन को ब्रुश से न रगड़ें, रंगीन सतह या प्लास्टिक के पुर्जे खराब हो जायेंगे।

कपड़े धोने की विधि

धोना :

1. धुलाई से पूर्व निम्नलिखित निर्देशों का अनुसरण करें। जल सप्लाई होस को जोड़ कर नल चला दें।
   - होस को वॉटर सलेक्टर से जोड़ें।
   - "वॉटर सलेक्टर नॉब" को "वॉश" पर सेट करें।
   - पानी निकास होस को नाली की तरफ खोल दें।
   - विद्युत तार को सप्लाई से जोड़ें।
2. WT8202/8203/8204/8205/8502/8503
   - वॉश सलेक्टर नॉब का चयन कपड़ों के अनुसार करें "नॉर्मल या हैवी"
   - साईकिल सलेक्टर नॉब को जरूरत के मुताबिक घुमा कर "वॉश/रिन्स" पर सेट करें।
3. WT9200/9300/9304AG
   साईकिल सलेक्टर नॉब को जरूरत के मुताबिक घुमा कर सेट करें "नॉर्मल या वॉश/हैवी"।
4. WT8202/8203/8204/8205/8502/8503/9200/9300/9304AG
   वॉटर सलेक्टर नॉब को "वॉश" पर सेट करें।

5. वॉश टब में कपड़े डालें।

6. पानी के टब में पानी भरें तथा डिटर्जेन्ट डालें।

7. WT8202/8204/8502
   कपडे धोने की अवधि का चयन करें (1 से 15 मिनट)

8. WT8203/8205/8503/9200/9300/9304AG
   वॉश टाईमर को सेट करें (1 से 35 मिनट)
   - भिगोने के लिये 'वॉश टाईमर' को 15 से ज्यादा अंक पर सेट करें।
   - वॉश टाईमर' को 15 से 35 मिनट के मध्य में रखें।

- 'वॉश टाईमर' को 15 मिनट पर सेट करने पर भी अगर मशीन 5 मिनट लगाती है तो यह कोई तकनीकी खराबी नहीं है।

भिगोने की प्रक्रिया

WT8203/8205/8503/9200/9300/9304AG

- अगर वॉश टाईमर "15" से "35" के बीच में रखते हैं तो वॉशिंग मशीन भिगोने (2~20) की प्रक्रिया के पूरा होने पर धुलाई शुरु कर देती है (15 मिनट)।
- सोक प्रक्रिया (20 मिनट) में 3 बार कपड़े 1.5~2.0 के लिये घुमाती है और 15 मिनट के लिये स्थिर रहते हैं।

9. धुलाई के पश्चात 'साईकिल सलेक्टर नॉब' को पानी निकालने के लिये 'ड्रेन' पर सेट करें।

'स्पिन ड्राई'

1. कपड़ो को 'स्पिन बास्केट' में अलग–अलग करके समतल डाल दें।

2. सेफ्टी कवर' लगाना न भूलें तथा अंदर वाली लिड को बंद कर दें।

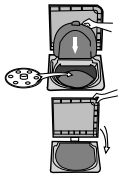

3. स्पिन ड्रायर लिड को बंद कर दें।
4. WT8202/8203/8204/8205/8502
   स्पिन ड्राई टाईमर को 1 से 5 मिनट पर सेट करें।

   WT8503/WT9200/WT9300/9304AG
   स्पिन ड्राई टाईमर को 1 से 10 मिनट पर सेट करें।

खंगालना'

1 कपड़ों को वॉश टब में डालें।



2 साईकिल सलेक्टर को वॉश/रिन्स या वॉश/हैवी पर रखें।

3 वॉश टब में पानी उचित मात्रा में डालें जिससे की पानी टब से बाहर न निकले।



4 'वॉश टाईमर' को (2-3 मिनट) के लिए सैट करें।

5 जब वॉश टाईमर "0" पर पहुँचे तब साईकिल सलेक्टर को ड्रेन पर करें।

6 ऊपर दी गई प्रक्रिया को तब तक दोहरायें जब तक कि साफ पानी निकलना न शुरू हो जाये (2-3 बार)

धुलाई निर्देशिका

ओवरफ्लो रिन्स

1. पानी डालते रहें
(पानी के प्रेशर को इस तरह सेट करें ताकि पानी की मात्रा निकलने वाले पानी से ज्यादा न हो)



2. वॉश टाईमर को 6 से 8 मिनट पर सेट करें।



3. जैसे ही वॉश टाईमर बंद हो पानी के नल को भी बंद कर दें।

4. साईकिल सलेक्टर नॉब' को ड्रेन पर सेट करें।



अतिरिक्त खंगालना

1 खंगालने की प्रक्रिया के बाद आप इस विधि का चुनाव ज्यादा प्रभावी खंगालने के लिए कर सकते हैं। (खंगालने के लिए सिर्फ इस विधि का चुनाव न करें।) स्पिन टब में कपड़ों को समान रूप से वितरित करें।

2 'वॉटर सलेक्टर नॉब' को स्पिन पर तथा 'साईकिल सलेक्टर नॉब' को निकास पर सेट करें।

3 लगभग 1 मिनट तक पानी डालें। पानी के स्तर को इस प्रकार सेट करें कि पानी वॉश टब में न आये।

4 पानी की सप्लाई को बंद करने के बाद, कपड़ों को सुरक्षा कवर से ढक लें तथा इनर लिड को बंद कर दें।

5 स्पिन ड्रायर लिड को बंद कर दें।

6 WT8202/8204/8502
स्पिन ड्राई टाईमर' को 2 से 3 मिनट के लिए सैट करें।

WT8503/9200/9300/9304AG
स्पिन ड्राई टाईमर' को 3 से 5 मिनट के लिए सैट करें।

धोने का समय

कपड़ो के प्रकार	धुलाई समय (मिनट में)	धुलाई का चुनाव
भारी कपड़े (परदे, चादर)	10 ~15	वॉश/हैवी
लाइनन, कॉटन	8 ~15	
अन्य कपड़े (अण्डरवियर आदि)	7	सामान्य
कृत्रिम धागे से बने कपड़े	2 ~ 5	
नाजुक, ऊनी, रेशमी कपड़े	2 ~ 5	

स्पिन ड्राई का समय

समय	कपड़ों के प्रकार
1 मिनट	पतले (रेशमी)
1~2 मिनट	ऊनी कपड़े
3~5 मिनट	कॉटन
5 मिनट	मोटे कॉटन

डिटर्जेन्ट

WT8202/WT8203/ WT8204/WT8205		WT8502/WT8503		WT9200/WT9300/ WT9304AG	
डिटर्जेन्ट की मात्रा	पानी का स्तर	डिटर्जेन्ट की मात्रा	पानी का स्तर	डिटर्जेन्ट की मात्रा	पानी का स्तर
34 ग्राम	कम (34ली०)	37ग्राम	कम (37ली०)	45 ग्राम	कम (45ली०)
42 ग्राम	मध्यम (42ली०)	45ग्राम	मध्यम (45ली०)	55 ग्राम	मध्यम (55ली०)
50 ग्राम	ज्यादा (50ली०)	55ग्राम	ज्यादा (55ली०)	65 ग्राम	ज्यादा (65ली०)

डिटर्जेन्ट की मात्रा उसके पैकेट के ऊपर दिए गये निर्देश के अनुसार ही करें।
डिटर्जेन्ट की मात्रा का चुनाव कपड़ों के हिसाब से करें।

रखरखाव

•जब आप कपड़ों को सुखाने के लिए 'स्पिन बास्केट' में डालते हैं
चित्र में दिखाए अनुसार कपड़ों को 'स्पिन बास्केट में समान रूप से फैला दें और सुरक्षा ढक्कन को अच्छे से बंद कर दें।



•बॉस्केट और टब के बीच में गिरे हुए कपड़ो को निकालने के लिए :-
सुरक्षा हेतु, पॉवर प्लग को सॉकेट से अलग कर दें।

1-स्पिन ड्रायर कवर के पेंच को खोल लें।

2-स्पिन ड्रायर कवर ब्रिम के साथ एक कॉनकेव और कॉनवेक्स रिंग से जुड़ा होता है। स्पिन ड्रायर कवर को ऊपर खींचकर अलग कर दें।

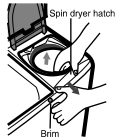

3-फंसे हुए कपड़े बाहर निकाल लें

४.स्पिन ड्रायर कवर को बंद कर दें। कवर को अच्छे से दबा दें ताकि वह सामने से ठीक तरह से फिट हो जाये तथा पेंच कस दें।

समस्या तथा उपाय

समस्या	निवारण
यदि वाशिंग मशीन काम नही करें	जाँच लें क्या विद्युत तार, पॉवर सप्लाई के साथ जुड़ा है?
कपड़े आसानी से ना घूम रहे हों।	अत्याधिक कपड़ों को मशीन में न डालें।
अधूरी स्पिनिंग	क्या कपड़े समान रूप से फैलाये हुये हैं ?
अधूरी निकास	क्या फिल्टर गंदगी से भरा है? कृपया साफ़ करें।
स्पिनड्रायर बास्केट नही घूम रही हो	जांचें ले कि स्पिन ड्रायर का ढक्कन ठीक से बंद है या नहीं। क्या कपड़े स्पिन ड्रायर बास्केट से गिरकर एक्सल में फंस गये हैं तो कृपया ऊपर दिये गये तरीके से कपड़े निकालें।

यदि आपको किसी प्रकार की सहायता की आवश्यकता है तो .....

• आप अपने विक्रेता या स्थानीय सैमसंग सर्विस केन्द्र को बिना किसी संकोच के संपर्क करें। वे आपकी सहायता करने के इच्छुक हैं।

आप उनको अपना नाम, पता फोन न० तथा समस्या अवश्य बतायें।

SAMSUNG ELECTRONICS

विशेषताएं

	WT8202/WT8203	WT8204/WT8205	WT8502/WT8503	WT9200/WT9300/WT9304AG
आकार (चौ०xग०xउँ०)	**776x434x900** मिमि०	**776x434x930** मिमि०	**799x489x932** मिमि०	**820x504x980** मिमि०
पानी का दबाव	**0.05~0.3MPa**	**0.05~0.3MPa**	**0.05~0.3MPa**	**0.05~0.3MPa**
	(0.5~3.0kg.f/cm2)	**(0.5~3.0kg.f/cm2)**	**(0.5~3.0kg.f/cm2)**	**(0.5~3.0kg.f/cm2)**
भार (नैट)	**24.5** किलो ग्राम	**25.5** किलो ग्राम	**26** किलो ग्राम	**29.5** किलो ग्राम
जल की मात्रा	**50** लीटर	**50** लीटर	**55** लीटर	**65** लीटर
निर्धारित समय	धुलाई 1 घण्टा	धुलाई 1 घण्टा	धुलाई 1 घण्टा	धुलाई 1 घण्टा
	सुखाना 15 मिनट	सुखाना 15 मिनट	सुखाना 15 मिनट	सुखाना 15 मिनट

सैमसंग हमेशा अपने उत्पादकों को सुधारने की कोशिश में रहता है। अतः विशेषतायें तथा ये उपभोक्ता निर्देशिका बिना किसी पूर्व सूचना के बदल सकती हैं।

Code No. DC68-01783C (Rev-2)